




Compressor Gauge Line Chart

Sanden Compressors - Ear Mount and Direct Mount

1 Groove Clutch


Ear Mount Compressor

C (Center) - Measure from the center of the pulley's single groove to the front face of the ear mount closest to the clutch.

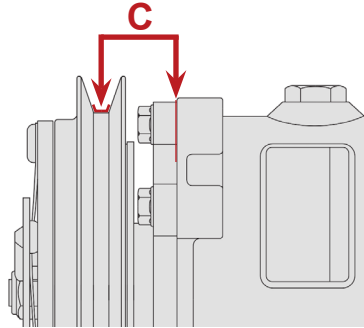

Direct Mount Compressor

C (Center) - Measure from the center of the pulley's single groove to the center of the top mounting hole closest to the clutch.

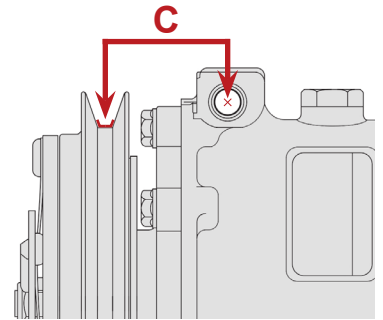


2 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.


R (Rear) - Measure from the center of the pulley's groove closest to the compressor to the front face of the ear mount closest to the clutch.

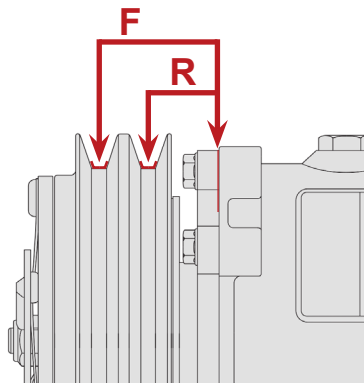

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

R (Rear) - Measure from the center of the pulley's groove closest to the compressor to the center of the top mounting hole closest to the clutch.

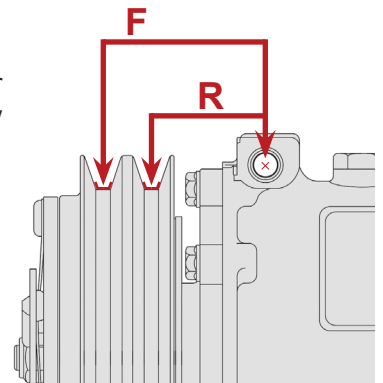


4 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.


C (Center) - Measure from the center of the clutch, which is a ridge, to the front face of the ear mount closest to the clutch.

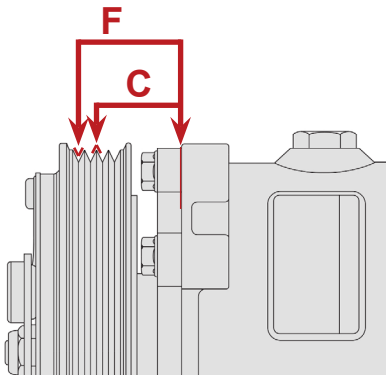

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a ridge, to the center of the top mounting hole closest to the clutch.

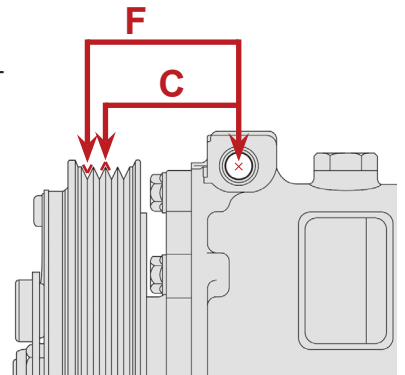


6 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.


C (Center) - Measure from the center of the clutch, which is a ridge, to the front face of the ear mount closest to the clutch.

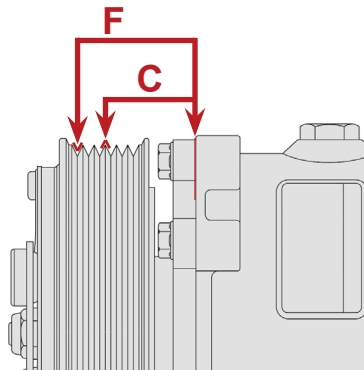

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a ridge, to the center of the top mounting hole closest to the clutch.

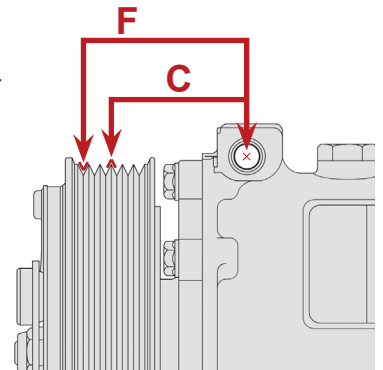



Compressor Gauge Line Chart


Sanden Compressors - Ear Mount and Direct Mount

7 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.


C (Center) - Measure from the center of the clutch, which is a groove, to the front face of the ear mount closest to the clutch.

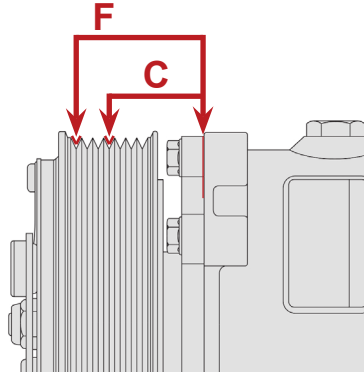

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a groove, to the center of the top mounting hole closest to the clutch.

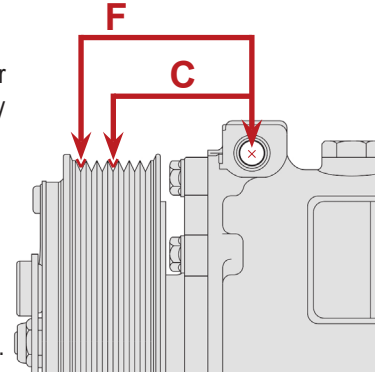


8 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.


C (Center) - Measure from the center of the clutch, which is a ridge, to the front face of the ear mount closest to the clutch.

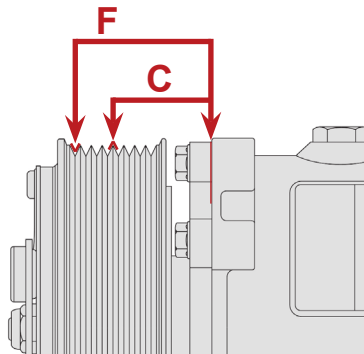

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a ridge, to the center of the top mounting hole closest to the clutch.

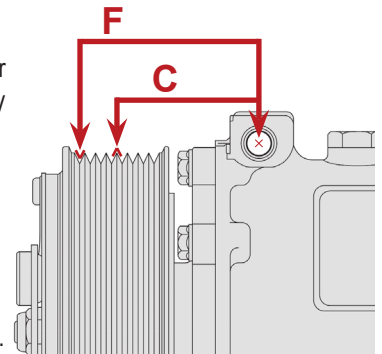


10 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.


C (Center) - Measure from the center of the clutch, which is a ridge, to the front face of the ear mount closest to the clutch.

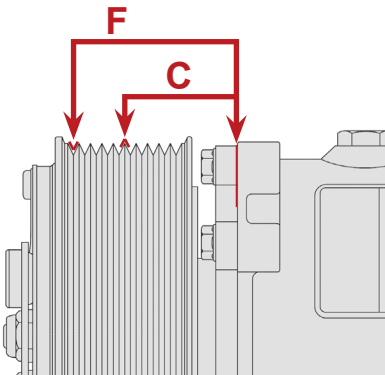

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a ridge, to the center of the top mounting hole closest to the clutch.

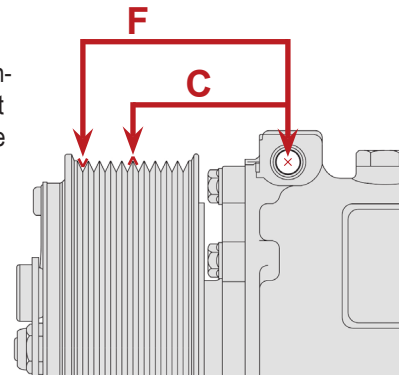


12 Groove Clutch

Ear Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the front face of the ear mount closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a ridge, to the front face of the ear mount closest to the clutch.

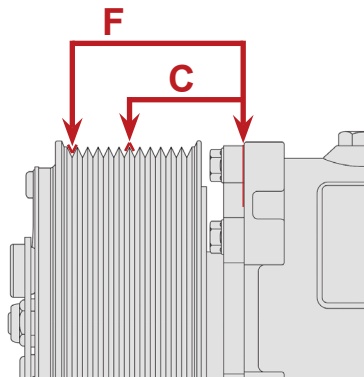

Direct Mount Compressor

F (Front) - Measure from the center of the pulley's groove farthest away from the compressor to the center of the top mounting hole closest to the clutch.

C (Center) - Measure from the center of the clutch, which is a ridge, to the center of the top mounting hole closest to the clutch.

