


Compressor Gauge Line Chart

York Compressors


1 Groove Clutch

- **C** (Center) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove on the pulley.
- **D** (Diameter) Measure the overall outside diameter of the pulley.

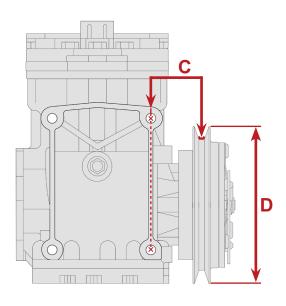


2 Groove Clutch

- **R** (Rear) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove closest to the compressor on the pulley.
- **F** (Front) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove furthest from the compressor on the pulley.
- **D** (Diameter) Measure the overall outside diameter of the pulley.

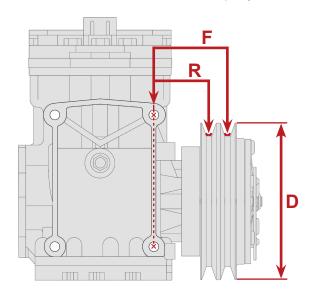

6 Groove Clutch

- **C** (Center) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove, which is a ridge, on the pulley.
- **F** (Front) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove furthest from the compressor on the pulley.
- **D** (Diameter) Measure the overall outside diameter of the pulley.

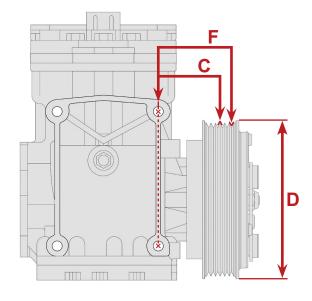

8 Groove Clutch

- **C** (Center) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove, which is a ridge, on the pulley.
- **F** (Front) Measure from the center of the front mounting hole on the side of the compressor to the center of the groove furthest from the compressor on the pulley.
- **D** (Diameter) Measure the overall outside diameter of the pulley.

