		•	Suction Line	Discharge Line		
805 13th St Humboldt 1-800-8	PAIR treet North , IA 50548 06-5312	EXPANSION	EVAPORATOR THER Warm Air Warm Air	MOSTATIC ING SWITCH Sight Glass Ra	ENSER	
A/C Syste	em	IN FI	LINE RECEIVER	/FILTER/		
Trouble-S	hooting	Low Pressure Liqui	d 👘 Low Pressure Gas 🔳	High Pressure Liquid	I High Pressure Gas	
		Normal Operati	ng System			
Pressure				Air Duct T	emperature Max	
Low Side	High Side	Evaporator Outlet		A/C - Low	A/C - Low Blower	

Cold

10-30 PSI

150-285 PSI

40 - 50 Degrees

Malfunctioning System							
Low Side	High Side	Symptom(s)	Problem(s)	Solution			
Low	Low	Poor cooling, a lot of bubbles or foam in sight glass, evaporator warm	Low refrigerant charge due to leak(s) in A/C system	Repair leak(s), Recharge with refrigerant			
Normal to Low	High	Poor cooling, cool receiver drier	Restricted condenser	Flush condenser internally or replace condenser			
Low	Low	Poor cooling, cool receiver drier	Restricted receiver/drier	Replace receiver drier, flush system			
Low	Low	Poor cooling, hot receiver drier	Expansion valve plugged, defective	Replace expansion valve, flush system			
Normal to Low	Normal	Cooling good initially then warms and air flow decreases (evap. freeze-up)	Defective thermostatic switch or compressor cycling switch	Replace thermostatic switch or compressor clutch cycling switch			
High	Low	Pressure guage readings are opposite of what they should be	Compressor hoses installed on the wrong ports	Remove hoses from compressor and re-install on the correct ports (S) suction, (D) discharge			
High	Low	Poor to no cooling system pressure equalizes very quickly when system is turned off	Defective compressor or worn out	Replace compressor, receiver drier and flush system			
Normal to High	High	Poor cooling	System overcharge	Correct the amount of refrigerant in the system			
Normal to High	High	Poor cooling at low speeds, engine overheats	Condenser or Radiator plugged externally, condenser fan motor or switch not working	Clean condenser and or radiator with compressed air or water pressure, straighten fins, replace condenser motor or switch			
		Air conditioning system will not turn on	No refrigerant, blown fuse, defective thermostat, pressure switch, broken wire, loose connector	Repair leak(s), Recharge with refrigerant, replace fuse(s), replace defective switch(s), check for loose connections or broken wires			